

SNA Corridor Chronological Track Movements (CTM)



Configuration No.	14	Enfield West to Berrima	CTM Endorsed By	Deane Thrower	Version
Weekend No.	46		Date Endorsed	12/05/2022	Final V01
TAA Number		0417-2022	CTM Coordinator	PPO	
Legend	Priority Movements	Changing Tracks	Test Train	Possession Details	Possession Limits and Power Outage Sections as per advertised is TAA

NOTE: Competent worker/s are to be arranged for work train and track machine movements, including Propelling and Piloting of trains when entering, exiting and within the possession limits.

NOTE: No equipment or infrastructure should be booked out (IBA) or left inoperable that would interfere with the operation of the CTM without approval prior to the possession.

MOVEMENT No.	Run Number	Forms Run Number	TIMES			Work Train/Track Machine Name	Work Train/Track Machine Consist	Movement			Worksite	Instructions	Traffic Officer/Pilot (Phone Number)	FORMS MOVEMENT No.	Supervisor / ARTC Site Rep (Phone Number)
			ENTER POSSESSION BOUNDARY	EXIT POSSESSION BOUNDARY	WORKSITE TIME			From	To	Track					

Friday Saturday

1					0730-0800	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Picton	Menangle	Up Main	Travel	Tampers exit Picton Yard- Up Refuge Siding and travel free at Up Main to Resurfacing Location at 65.300km	James Stevens Ph: 0400 546 701	2	Dean Bradley Ph: 0428 286 951
2					0800-0900	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Menangle	Menangle	Up Main	Tamping	Tamp Up Main: 65.300-65.750km - TSR Location	James Stevens Ph: 0400 546 701	3	Dean Bradley Ph: 0428 286 951
3					0900-0930	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Menangle	Picton	Up Main to Down Main	Transfer and Travel	Transfer Tampers from Up Main to Down Main at 81.580km Maldon 106A Pts and reach Resurfacing Location at 85.900km	James Stevens Ph: 0400 546 701	4	Dean Bradley Ph: 0428 286 951
4					1000-1100	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Menangle	Picton	Down Main	Tamping	Tamp Down Main: 85.900-86.300km	James Stevens Ph: 0400 546 701	5	Dean Bradley Ph: 0428 286 951
5					1100-1130	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Picton	Picton	Down Main to Up Main	Transfer and Travel	Transfer Tampers from Down Main to Up Main at 85.878km Picton 114B Pts and Travel at Up Main to Resurfacing Location at 85.900km	James Stevens Ph: 0400 546 701	6	Dean Bradley Ph: 0428 286 951
6					1130-1400	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Picton	Picton	Up Main	Tamping	Tamp Up Main: 85.900-88.500km - TSR Location	James Stevens Ph: 0400 546 701	7	Dean Bradley Ph: 0428 286 951
7					1400-1430	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Picton	Tahmoor	Up Main	Travel	Travel Tampers at Up Main to Resurfacing Location at 94.000km	James Stevens Ph: 0400 546 701	8	Dean Bradley Ph: 0428 286 951
8					1430-1530	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Tahmoor	Tahmoor	Up Main	Tamping	Tamp Up Main: 94.000-95.000km - TSR Location	James Stevens Ph: 0400 546 701	9	Dean Bradley Ph: 0428 286 951
9					1530-1600	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Tahmoor	Bargo	Up Main	Travel	Travel Tampers at Up Main to Resurfacing Location at 103.500km	James Stevens Ph: 0400 546 701	10	Dean Bradley Ph: 0428 286 951
10					1600-2000	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Bargo	Bargo	Up Main	Tamping	Tamp Up Main: 103.400-107.300km - TSR Location	James Stevens Ph: 0400 546 701	11	Dean Bradley Ph: 0428 286 951
11					2000-2030	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Bargo	Yerrinbool	Up Main	Travel	Travel Tampers at Up Main to Resurfacing Location at 115.800km	Kevin Rose Ph: 0405 377 474	12	Paul Pearce Ph: 0418 435 727
12					2030-2100	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Yerrinbool	Yerrinbool	Up Main	Tamping	Tamp Up Main: 115.800-116.200km - TSR Location	Kevin Rose Ph: 0405 377 474	13	Paul Pearce Ph: 0418 435 727
13					2130-2230	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Yerrinbool	Yerrinbool	Up Main	Tamping	Tamp Up Main: 117.000-118.200km - TSR Location	Kevin Rose Ph: 0405 377 474	14	Paul Pearce Ph: 0418 435 727
14					2300 hrs on 14 May - 0100 hrs on 15 May 2022	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Yerrinbool	Yerrinbool	Up Main	Tamping	Tamp Up Main: 120.250-121.200km - TSR Location Resurfacing through Tunnel (120.600-120.900km)	Kevin Rose Ph: 0405 377 474	15	Paul Pearce Ph: 0418 435 727
15		400				Sydney Trains Team 1 Production Tamper	TJ-095, BX-061, DS-004	Campbelltown	Glenlee	Down Main South	Sydney Trains Corridor	Ex_Campbelltown Perway Siding, cross 73 points to the Down Main. Commence work tamping the Up & Down Mains from 53.000km to 58.500km, working in the Down direction	Bill Beazley 0428 246 579		Bill Beazley 0428 246 579
16					1400	Sydney Trains Team 1 Production Tamper	TJ-095, BX-061, DS-004	Glenlee	Campbelltown	Down Main South	Sydney Trains Corridor	Proceed via the Down Main to Campbelltown.Stable country side of 73 points.	Bill Beazley 0428 246 579		Bill Beazley 0428 246 579

Sunday

17					0130-0300	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Yerrinbool	Yerrinbool	Up Main	Tamping	Tamp Up Main: 122.200-123.600km - TSR Location Resurfacing through Tunnel (122.350-123.265km)	Kevin Rose Ph: 0405 377 474	18	Paul Pearce Ph: 0418 435 727
18					0330-0430	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Balaclava	Balaclava	Up Main	Tamping	Tamp Up Main: 127.000-127.600km - TSR Location	Kevin Rose Ph: 0405 377 474	19	Paul Pearce Ph: 0418 435 727
19					0500-0600	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Mittagong	Mittagong	Up Main	Tamping	Tamp Up Main: 130.750-131.800km - TSR Location	Kevin Rose Ph: 0405 377 474	20	Paul Pearce Ph: 0418 435 727
20					0630-0930	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Bowral	Bowral	Up Main	Tamping	Tamp Up Main: 134.000-135.300km - TSR Location Resurfacing through Tunnel (134.620-135.120km)	James Stevens Ph: 0400 546 701	21	Dean Bradley Ph: 0428 286 951

NOTE: Competent worker/s are to be arranged for work train and track machine movements, including Propelling and Piloting of trains when entering, exiting and within the possession limits.

NOTE: No equipment or infrastructure should be booked out (IBA) or left inoperable that would interfere with the operation of the CTM without approval prior to the possession.

MOVEMENT No:	Run Number	Forms Run Number	TIMES			Work Train/Track Machine Name	Work Train/Track Machine Consist	Movement			Worksite	Instructions	Traffic Officer/Pilot (Phone Number)	FORMS MOVEMENT No.	Supervisor / ARTC Site Rep (Phone Number)
			ENTER POSSESSION BOUNDARY	EXIT POSSESSION BOUNDARY	WORKSITE TIME			From	To	Track					
21					0930-1000	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Bowral	Balaclava	Up Main to Down Main	Transfer and Travel	Travel Tampers free at Up Main to 130.080km Mittagong Junciton 3C Pts, Transfer from Up Main to Down and Travel at Down Main to Resurfacing Location at 127.200km	James Stevens Ph: 0400 546 701	22	Dean Bradley Ph: 0428 286 951
22					1000-1100	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Balaclava	Balaclava	Down Main	Tamping	Tamp Down Main: 127.200-128.100km - TSR Location	James Stevens Ph: 0400 546 701	23	Dean Bradley Ph: 0428 286 951
23					1100-1130	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Balaclava	Tennessee	Down Main	Travel	Travel Tampers at Down Main to Resurfacing Locatoin at 111.100km	James Stevens Ph: 0400 546 701	24	Dean Bradley Ph: 0428 286 951
24					1130-1230	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Tennessee	Tennessee	Down Main	Tamping	Tamp Down Main: 111.100-111.400km - TSR Location	James Stevens Ph: 0400 546 701	25	Dean Bradley Ph: 0428 286 951
25					1300-1400	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Bargo	Bargo	Down Main	Tamping	Tamp Down Main: 103.300-103.500km - TSR Location	James Stevens Ph: 0400 546 701	26	Dean Bradley Ph: 0428 286 951
26					1400-1430	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Bargo	Picton	Down Main to Up Main	Transfer and Travel	Travel Tampers free at Down Main to 97.500km 310A Pts Tahmoor Colliery, Transfer from Down Main to Up Main and travel at Up Main to Resurfacing Location at 88.500km	James Stevens Ph: 0400 546 701	27	Dean Bradley Ph: 0428 286 951
27					1430-1530	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Picton	Picton	Up Main	Tamping	Tamp Up Main: 88.500-89.250km - TSR Location	James Stevens Ph: 0400 546 701	28	Dean Bradley Ph: 0428 286 951
28					1530-1600	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Picton	Picton	Up Main to Branch Line	Transfer	Transfer Tampers at 85.570km 3CA Pts Picton from Up Main to Branch Thirlmere Branch Line	James Stevens Ph: 0400 546 701	29	Dean Bradley Ph: 0428 286 951
29					1600-1800	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Picton	Picton	Branch Line	Tamping	Tamp Thirlmere Branch Line: 85.900-86.300km Minimum two (2) Passes required	James Stevens Ph: 0400 546 701	30	Dean Bradley Ph: 0428 286 951
30					1800-1830	Resurfacing Machines	09-3X Tamper & Ballast Regulator	Picton	Picton	Up Refuge	Stable	Stable Tampers at Picton Yard-Up Refuge Siding	James Stevens Ph: 0400 546 701	31	Dean Bradley Ph: 0428 286 951

Monday